















# INSTRUKCJA MONTAŻU

Drzwi przesuwne do pergoli

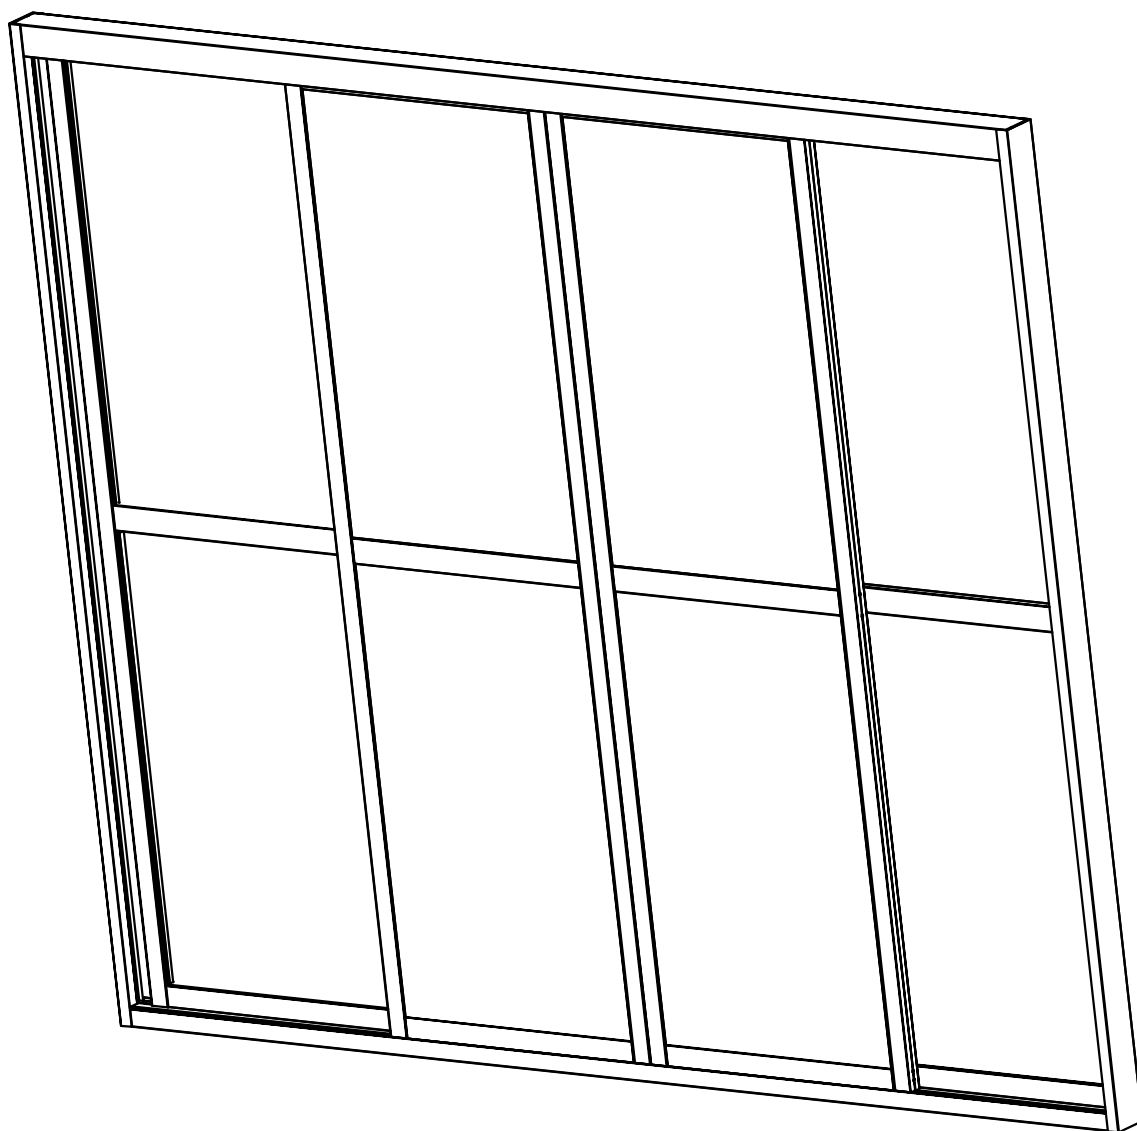






**LIDERWOOD**

# Wykaz części



A		1 szt.
B		1 szt.
C		2 szt.
D		1 szt.
D1		1 szt.
D2		1 szt.
D3		1 szt.
E	 ST 3,5 x 16	8 szt.
F	 ST 5 x 30	6 szt.
G		3 szt.
H		1 szt.
I		3 szt.
J		1 szt.




1

	C	x2
	G	x8

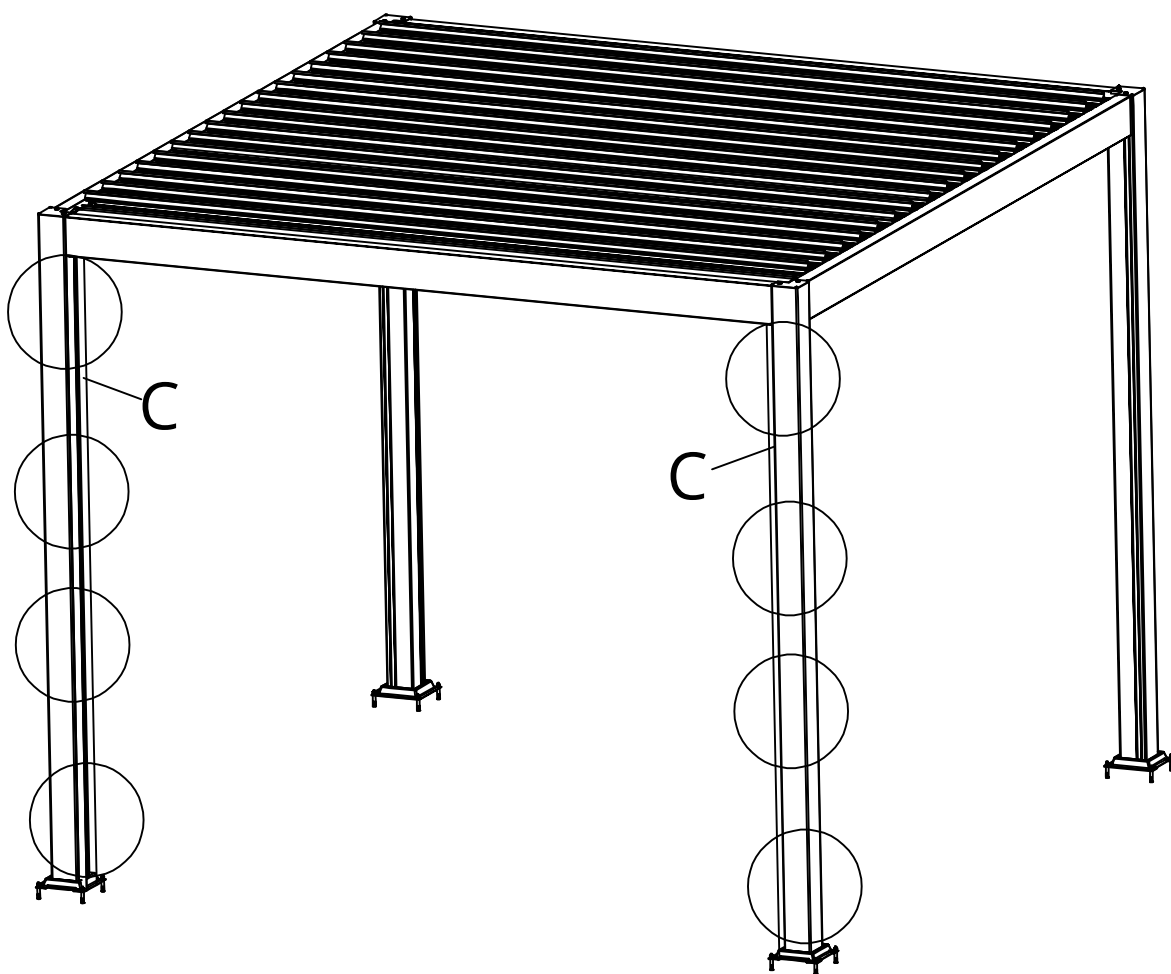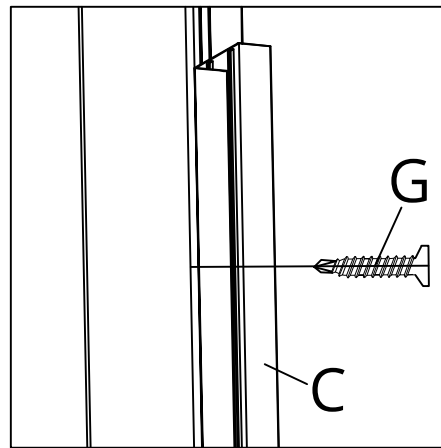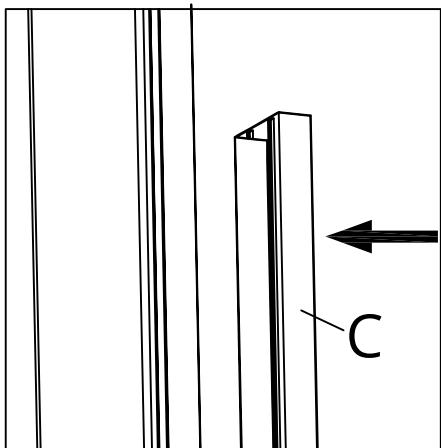




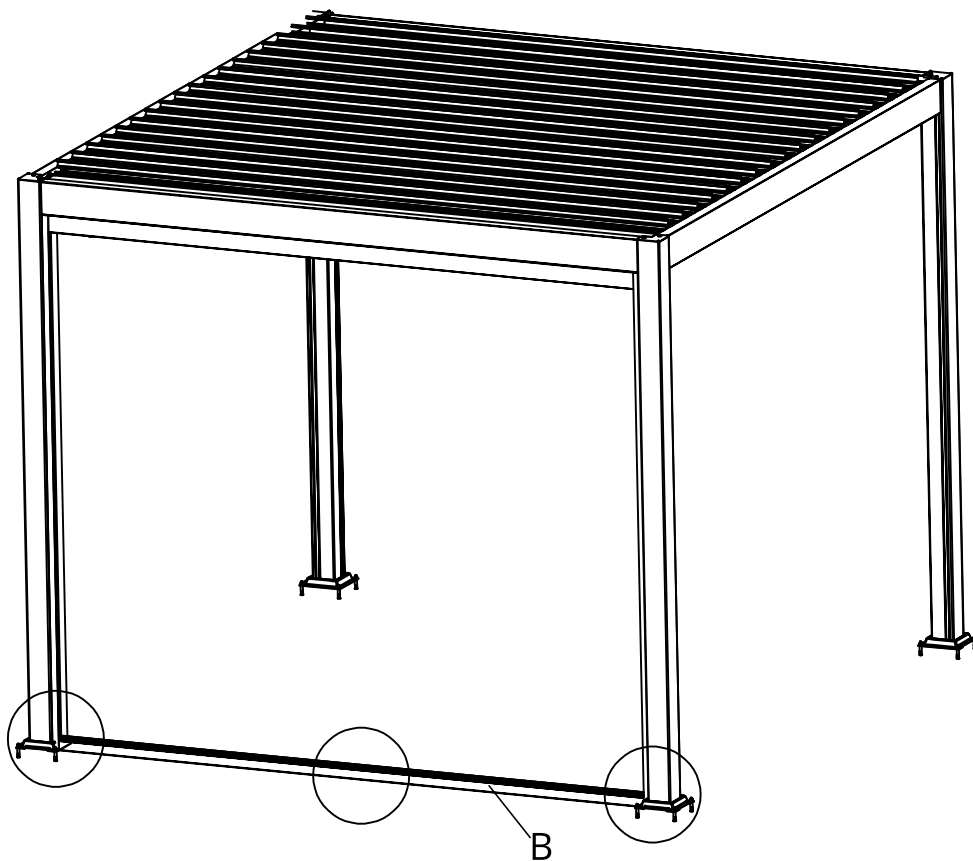
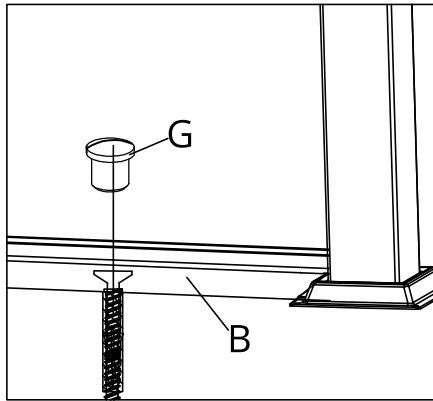
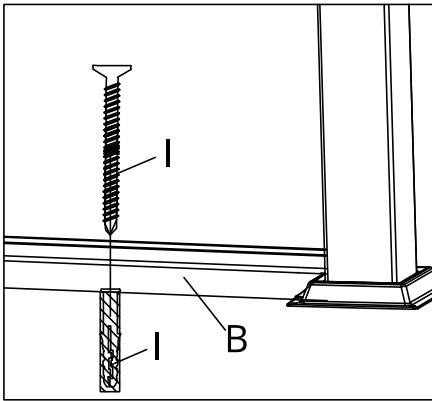
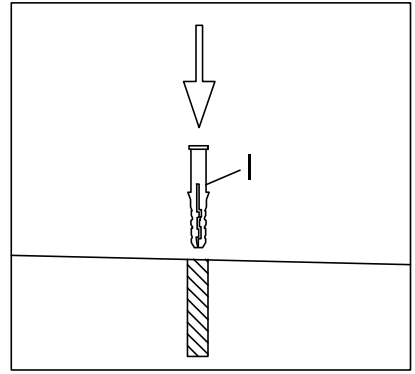
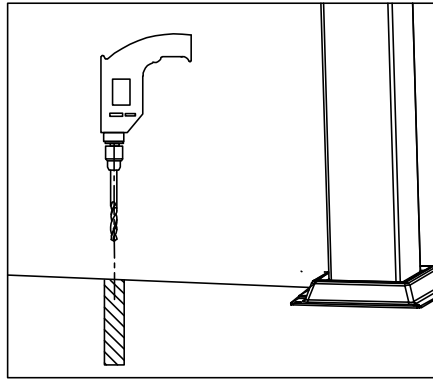
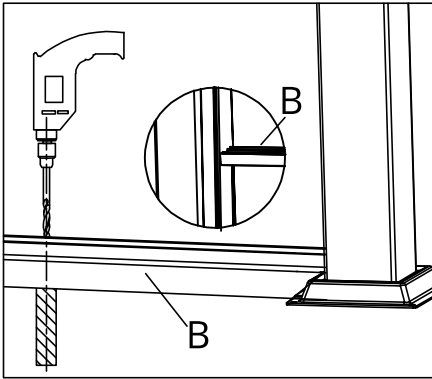
2

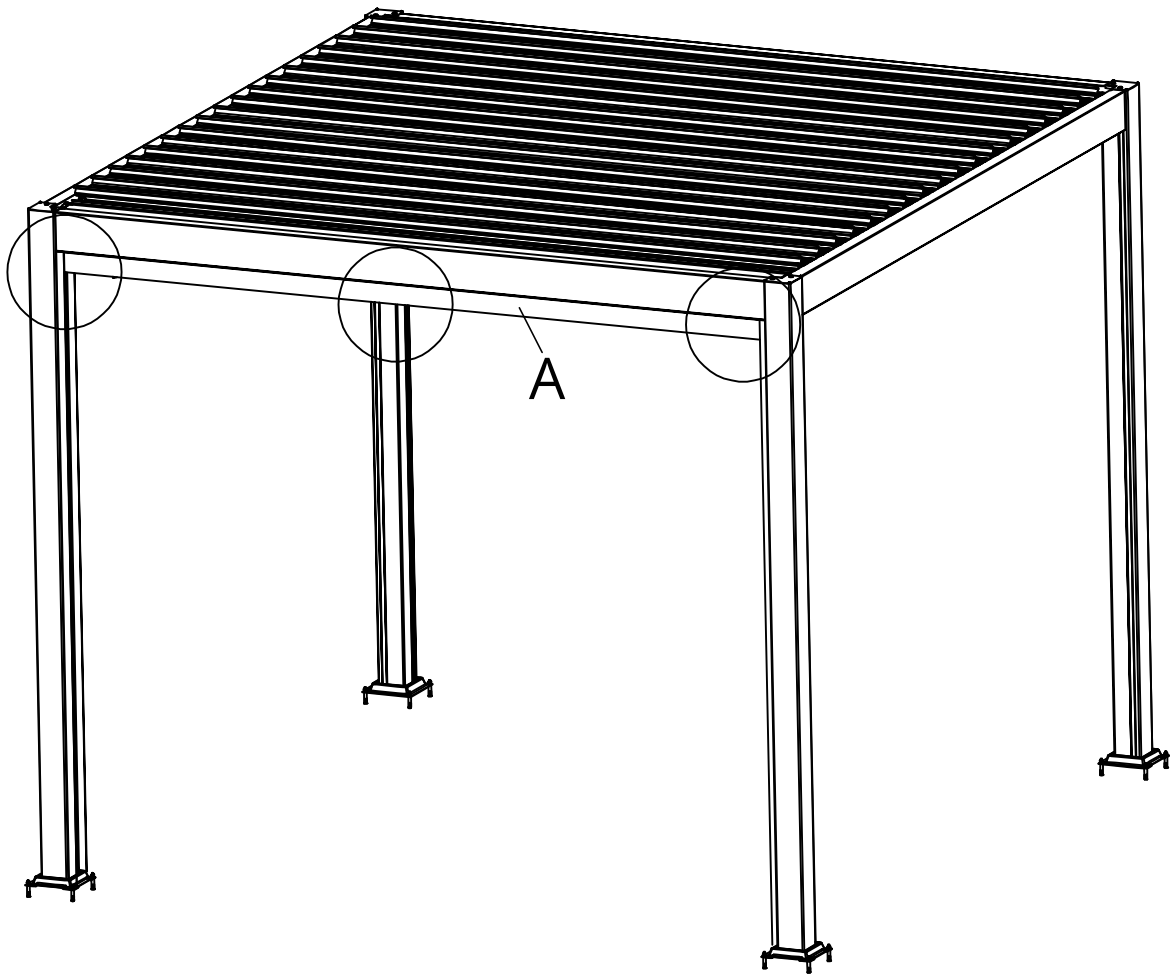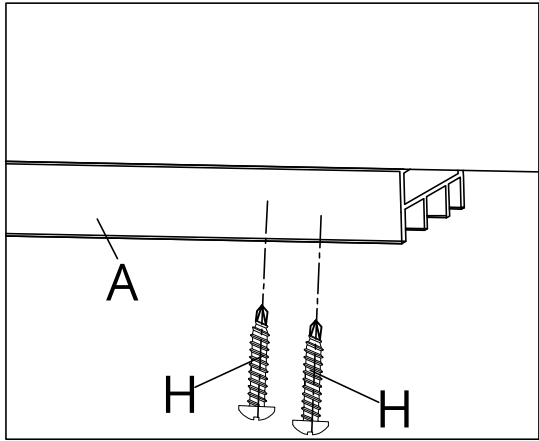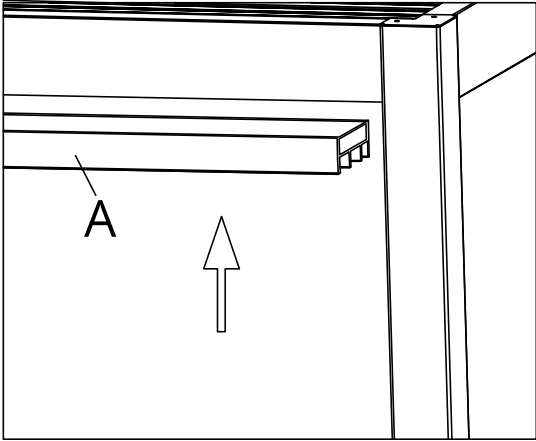	A	x1
	H	x6







# 3





	B	x1
	I	x3
	G	x3




4

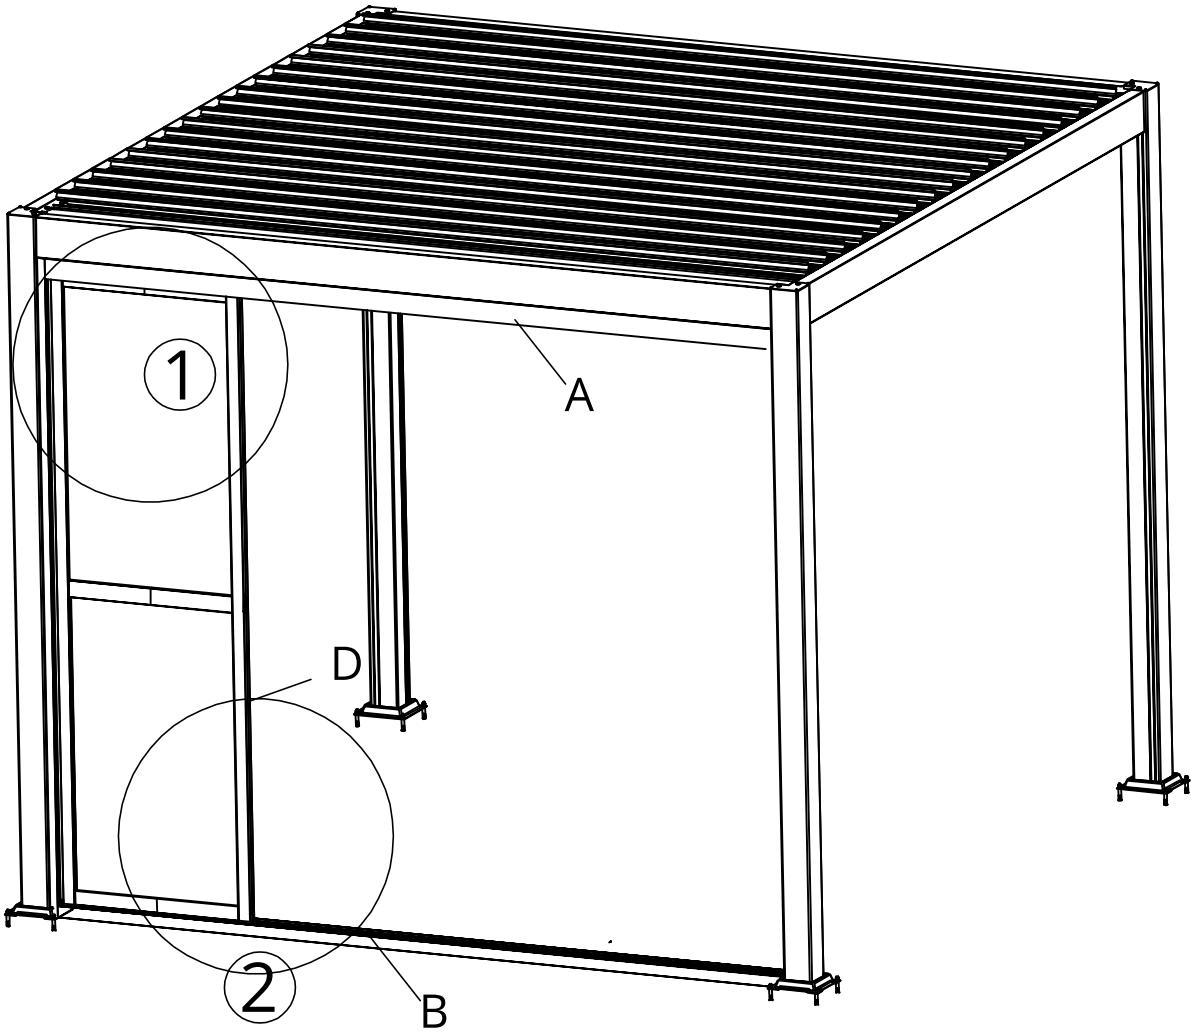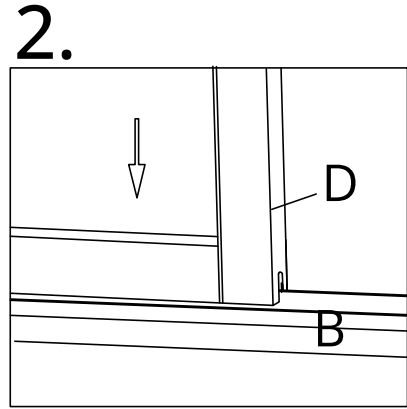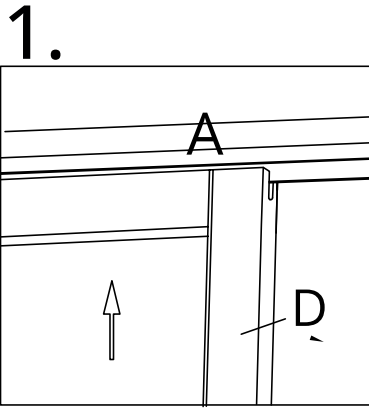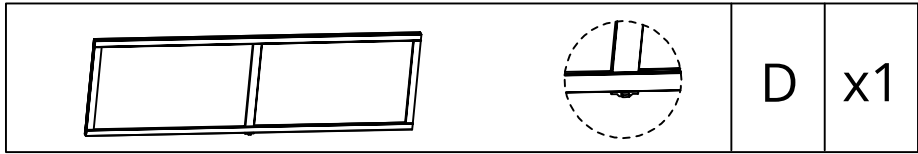


5

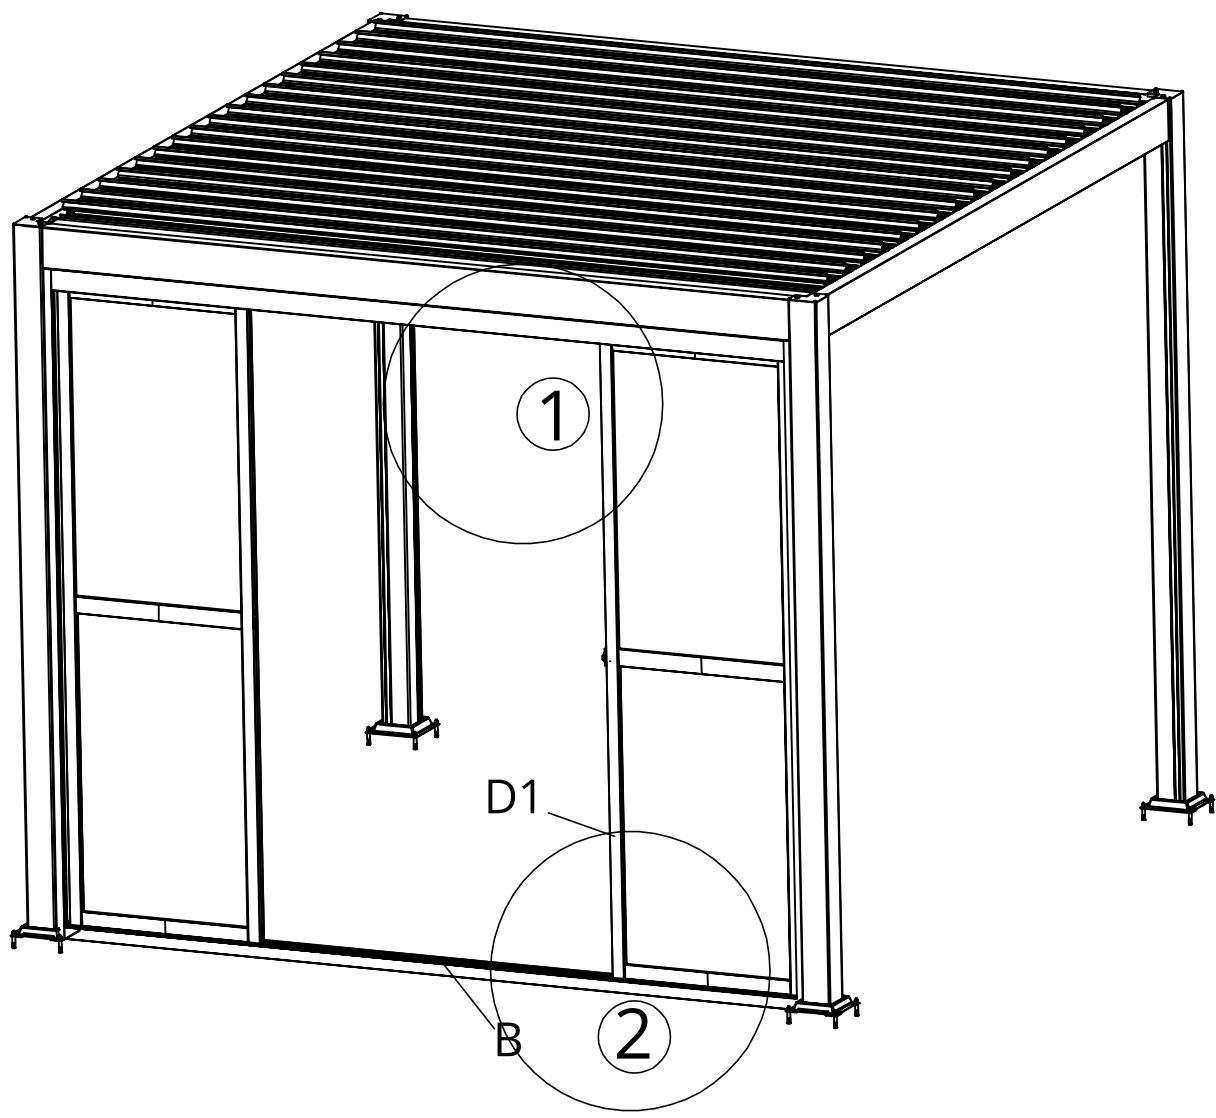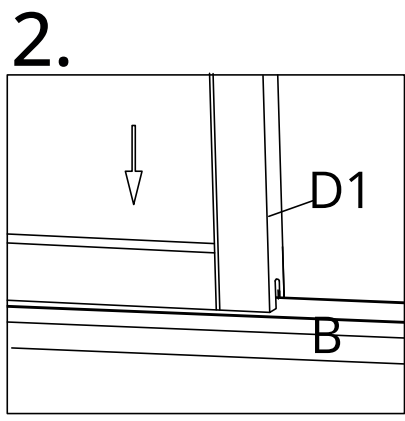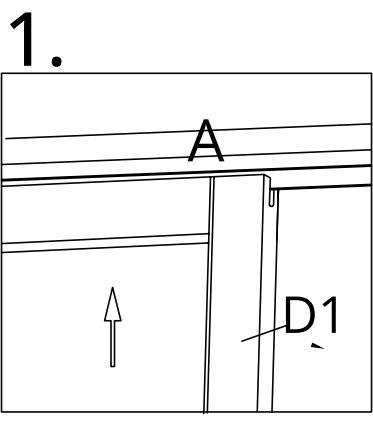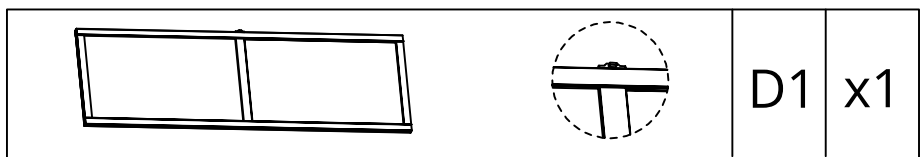



6

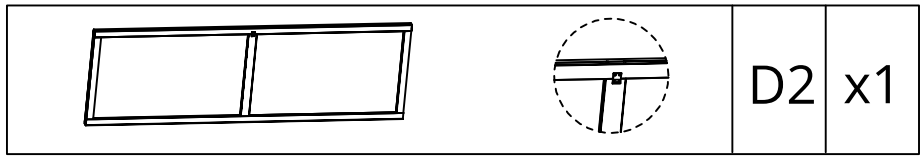


1.

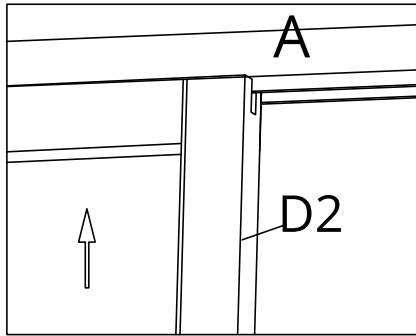


2.

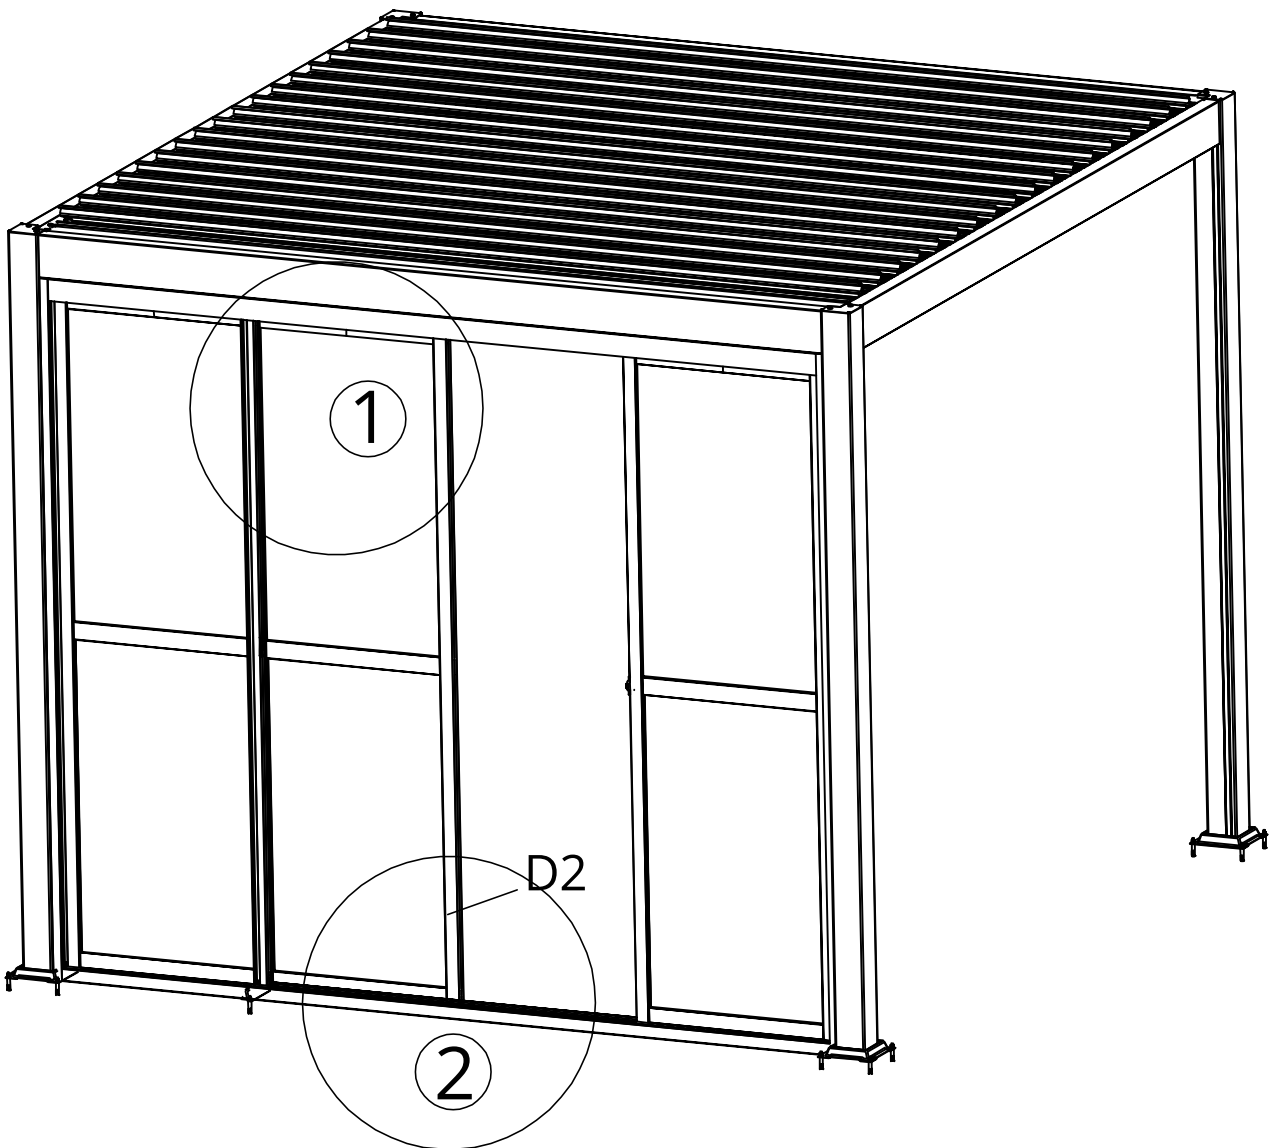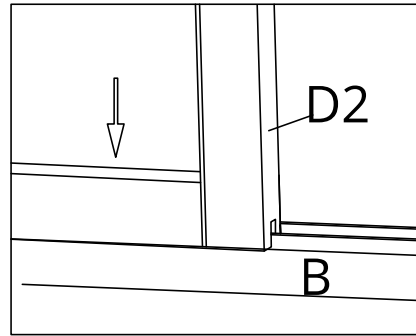



7

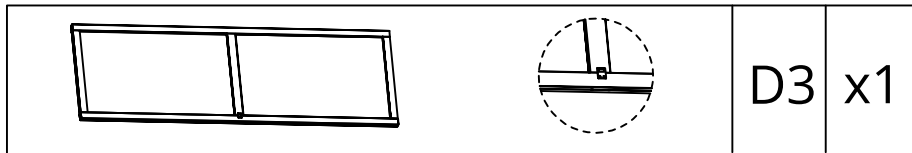


1.

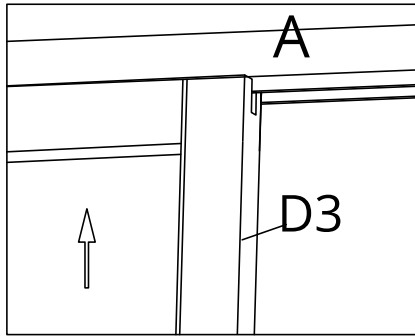



2.

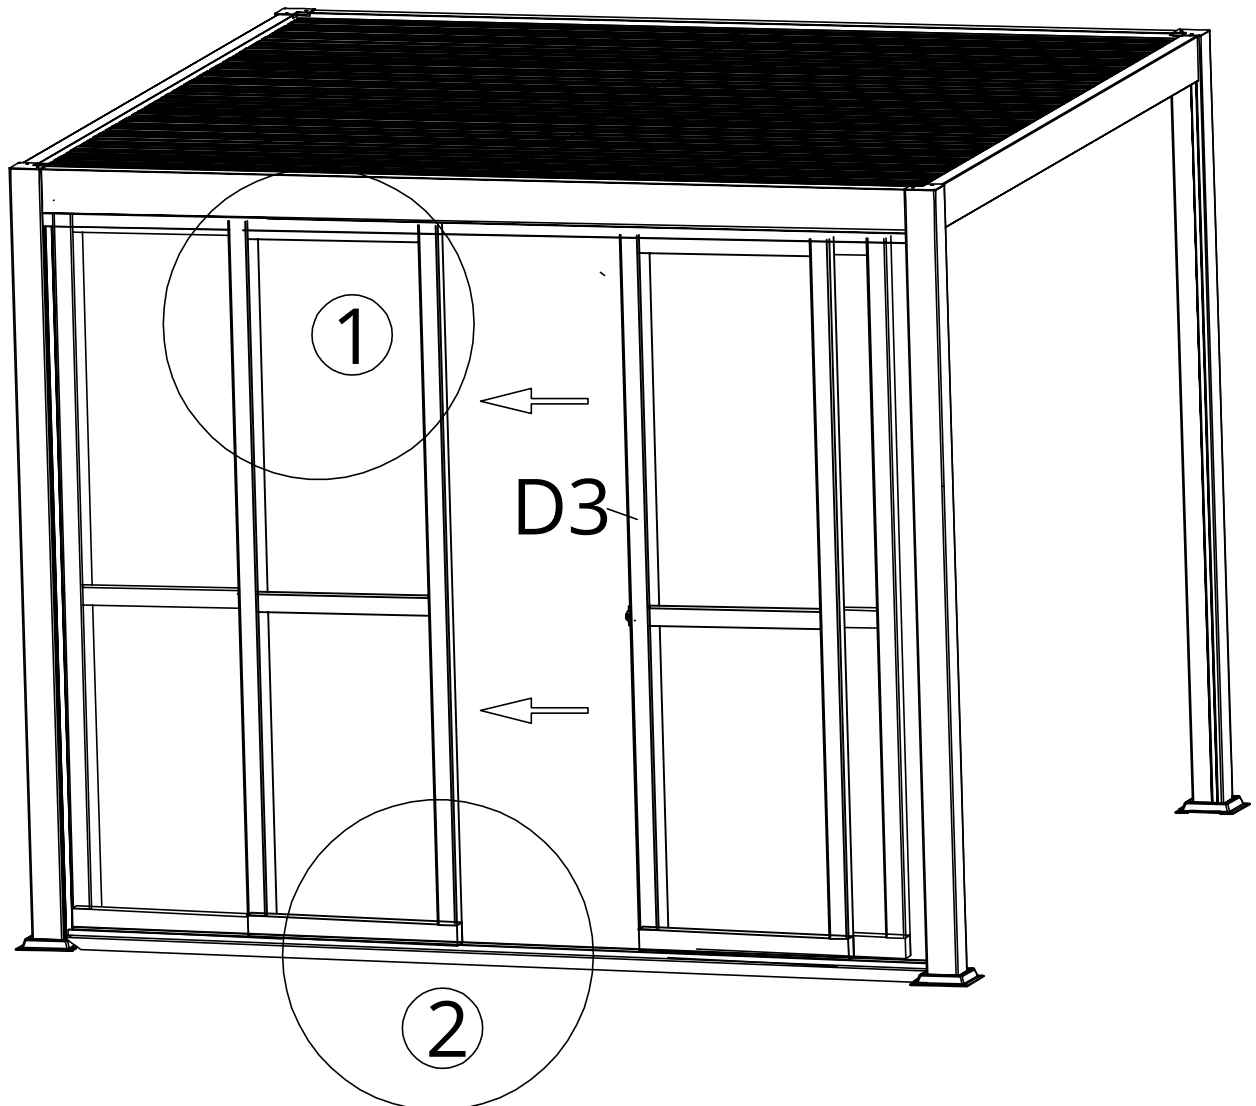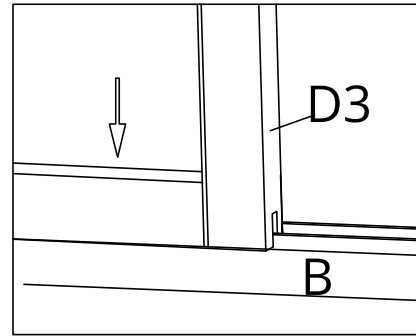

1.

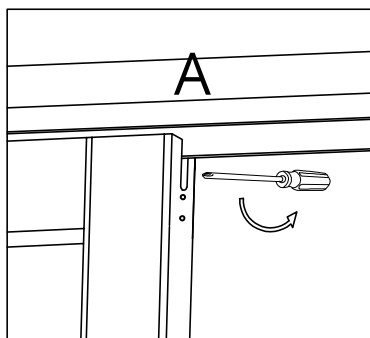

2.

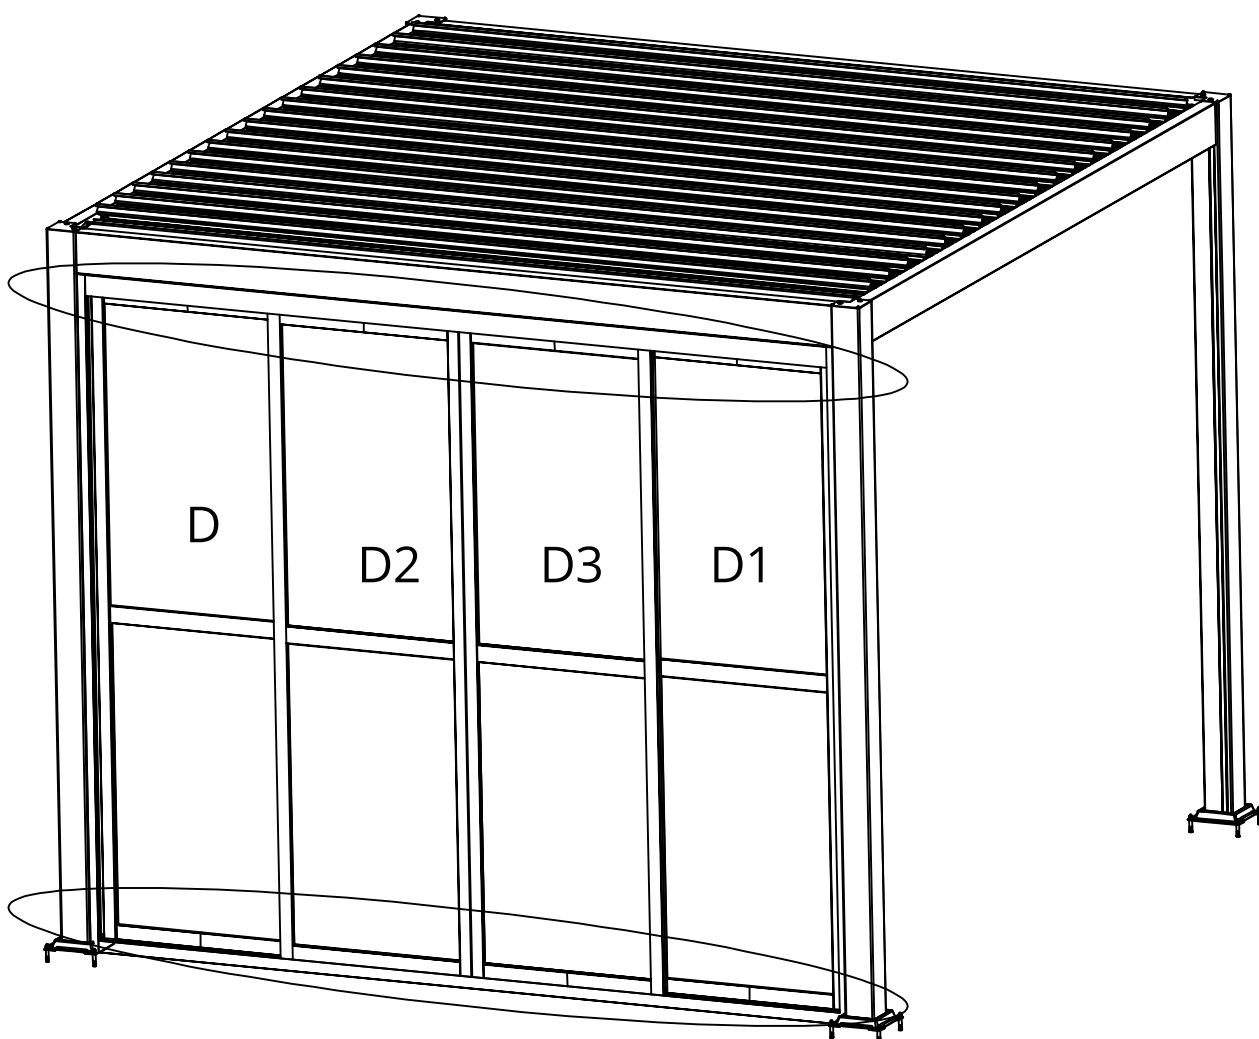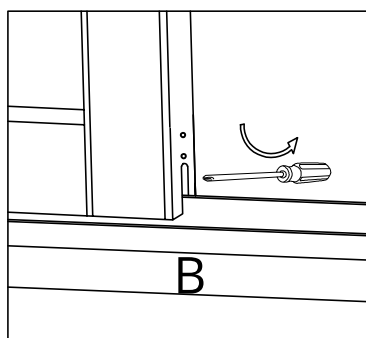

9

